 


New Trusted Identity Begins



LAMINATOR

 
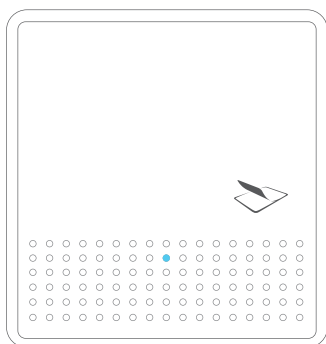 


QUICK INSTALLATION GUIDE



614518

Features

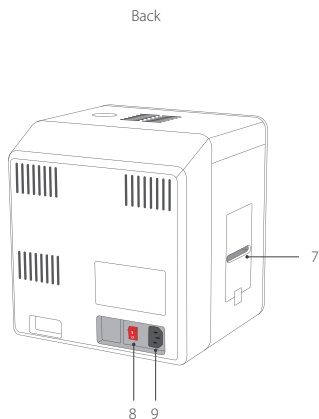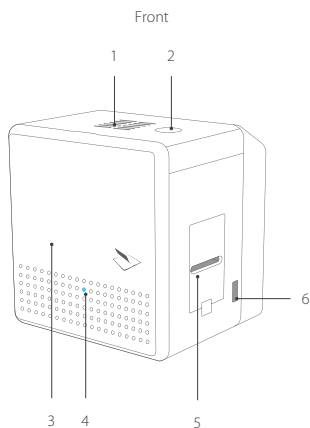


1. Air Vent
2. Physical Lock *option
3. Front Cover
4. LED Indicator
5. Card Insert Slot
6. IR Comm. Port

7. Card Exit Slot
8. Power Switch
9. AC Power Connector

Included



 SMART-81
Laminator



Laminator Film
Cartridge
(in the Laminator)



AC Power
cable

 


Binding Clamp




Quick Guide


Laminator Installation

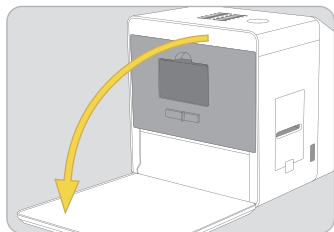

 
1. Open the front side of the Laminator cover.

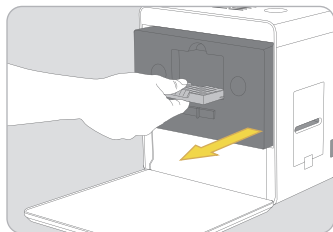

 
2. Hold the Laminator film cartridge handle and pull it out.

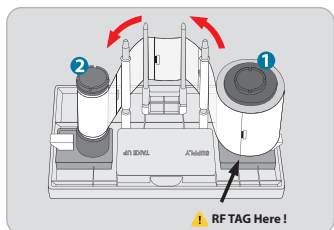

 
3. Insert the ① Laminator film SUPPLY core on the mounting place of the cartridge core until it "clicks". Wind the film around four shafts following the diagram arrow, and insert ② TAKE UP core into the core mounting until it "clicks".

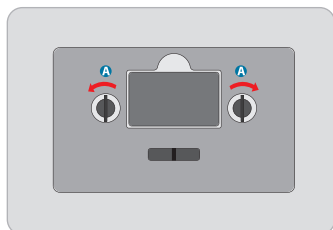

 8. Adjust the tension of loaded Laminator film in the direction of the arrow using the Ⓐ TENSION KNOB on the front side of the film cartridge.

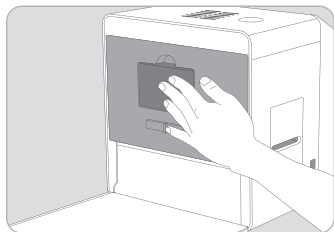

 
5. Mount the Laminator film cartridge.
The cartridge should be tightly combined with the Laminator.

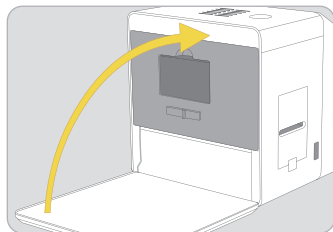


6. Close the front side of Laminator cover.



 
The RF tag side of the supply core should be mounted in the direction of the cartridge surface.

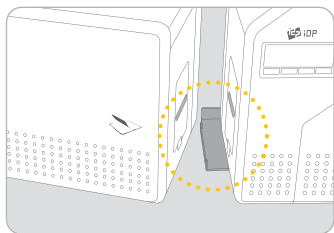

 
7. Connect the Printer and Laminator with binding clamps.

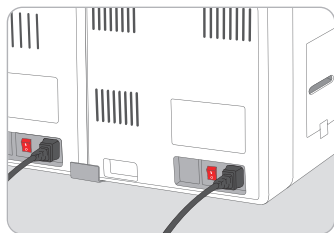

 8. Connect the AC Power cable and USB cable.

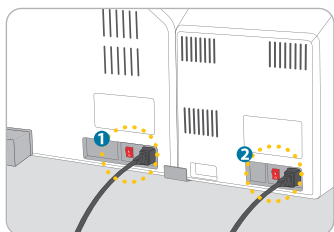


 9. Turn on ❶ the Printer by pressing  the On/Off button at first and then, turn on ❷ the Laminator.

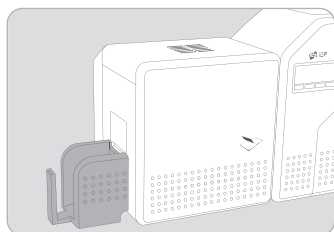

10. Install the Card stacker.

 ※ The Card stacker is included in the SMART-81 printer package.

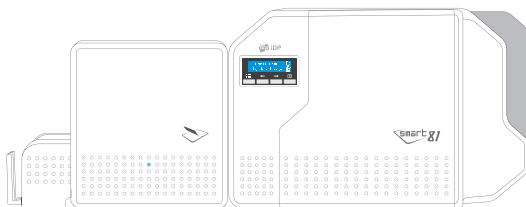

11. Check if the model name displayed on the SMART-81 Printer LCD has been changed to SMART-81SL or SMART-81DL.

New Trusted Identity Begins



IDP Corp., Ltd.

#601, 50, Digital-ro 33-gil,
Guro-gu, Seoul, Korea,
08377

T +82-2-6099-3700
F +82-2-6099-3717
E sales@idp-corp.com

IDP Americas, Inc.

1485 S County Trail, Unit 306
East Greenwich, RI 02818
USA

T +1-401-400-7111
F +1-401-667-7445
E sales@idpamericas.com

IDP Middle East

13F, Jafza View 18, Downtown
Jebel Ali P.O.Box 17588,
Dubai U.A.E.

 
T +971-4-889-5900
E mea@idp-corp.com



New Trusted Identity Begins



LAMINATOR


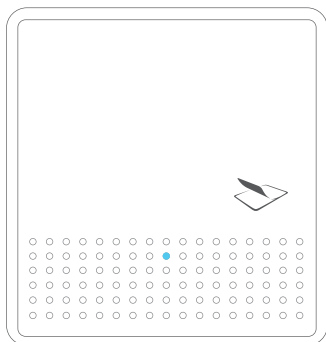


빠른 설치 가이드



614518

  라미네이터 개요

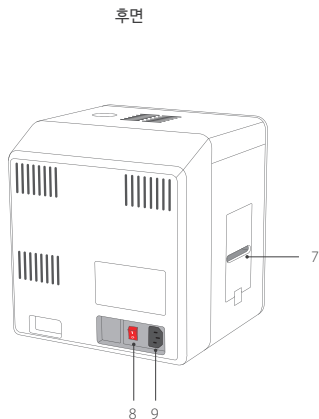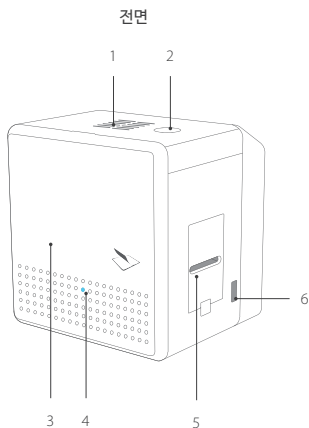


1. 공기 배출구
2. Key 잠금장치 *옵션
3. 전면 커버
4. LED 인디케이터
5. 카드 진입구
6. 적외선 통신 포트

7. 카드 배출구
8. 전원 스위치
9. AC 전원 포트

구성품



 SMART-81
라미네이터



필름 카트리지
(라미네이터 본체 내장)



AC 파워
케이블

 


바인딩 클램프




퀵 가이드


I. 라미네이터 설치

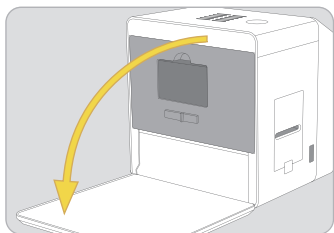

 
1. 라미네이터 전면 커버를 열어 주십시오.

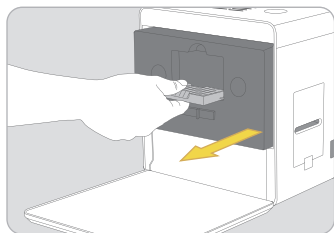

 
2. 라미네이터 필름 카트리지의 손잡이를 잡고 당겨서 꺼내십시오.

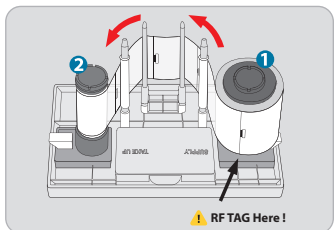

 
3. 라미네이터 필름이 감겨져 ① SUPPLY 코어를 카트리지의 코어 장착 홀에 “딸깍” 소리가 날 때까지 끼웁니다.
그림과 같이 화살표 방향에 따라 필름을 4개의 샤프트에 걸고 필름이 감겨져있지 않은 ② TAKE UP 코어를 코어 장착 홀에 “딸깍” 소리가 날 때까지 끼웁니다.

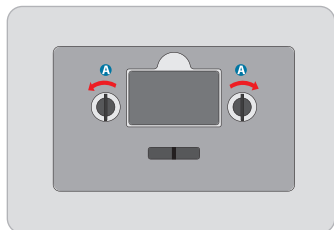

 4. 라미네이터 필름 카트리지 전면 ① 텐션노브를 화살표 방향으로 돌려 장착된 필름의 텐션을 조절합니다.

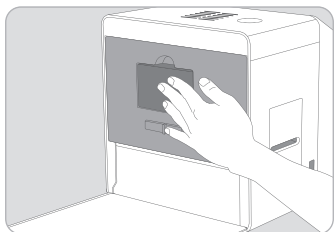

 
5. 라미네이터 필름 카트리지를 장착해 주십시오.
카트리지는 라미네이터에 단단히 결합되어야 합니다.

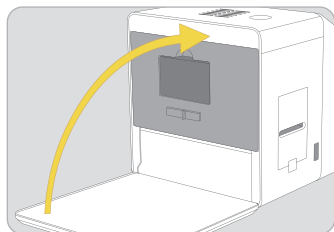


6. 라미네이터 전면 커버를 닫아 주십시오.



 
RF tag의 방향은 반드시 각 카트리지의 supply 코어 위치의 안쪽 방향으로 장착되어야 합니다.

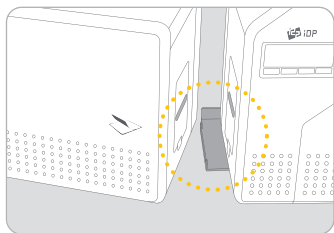

 
7. 바인딩 클램프를 사용하여 SMART-81 프린터와 라미네이터를 결합합니다.

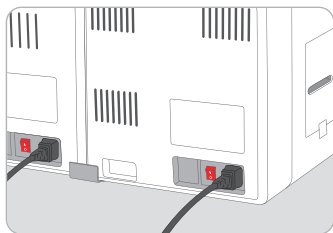

 8. AC 파워 케이블을 연결합니다.

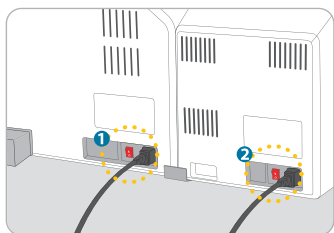


 9. ❶ 프린터 전원 스위치를  눌러 프린터 전원을 켜신 뒤, ❷ 라미네이터 전원 스위치를 눌러 라미네이터의 전원을 켭니다.

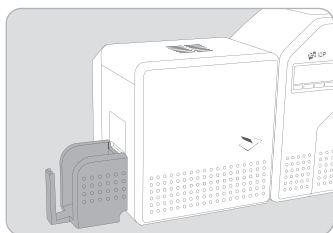

10. 카드 스택커를 장착합니다.

 ※ 카드 스택커는 SMART-81 프린터와 함께 제공됩니다.

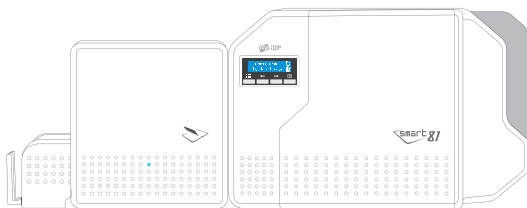

11. SMART-81 프린터 LCD에 표시되는 모델명이 SMART-81SL 또는 SMART-81DL로 변경된 것을 확인합니다.

New Trusted Identity Begins



아이디피(주)

서울시 구로구
디지털로33길 50 601호
08377

T +82-2-6099-3700
F +82-2-6099-3717
E sales@idp-corp.com

IDP Americas, Inc.

1485 S County Trail, Unit 306
East Greenwich, RI 02818
USA

T +1-401-400-7111
F +1-401-667-7445
E sales@idpamericas.com

IDP Middle East

13F, Jafza View 18, Downtown
Jebel Ali P.O.Box 17588,
Dubai U.A.E.

T +971-4-889-5900
E mea@idp-corp.com

