
ENGLISH/SPANISH

Experience the Next Evolution in Card Printing

smart 52

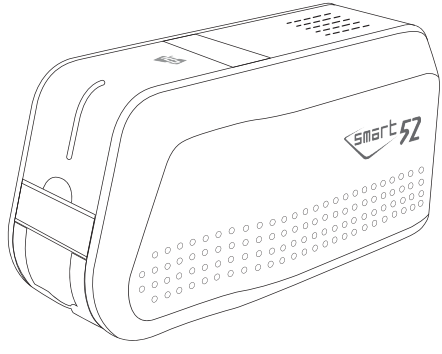


QUICK INSTALLATION GUIDE

IDP


615522

Features

Front

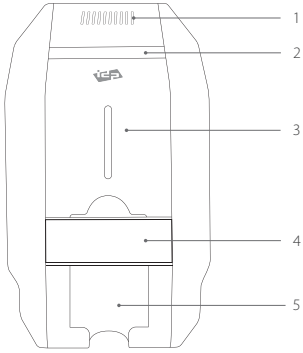


Back

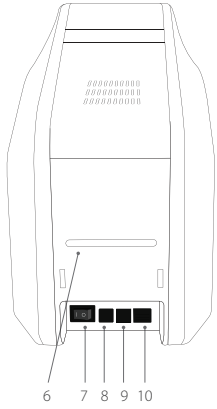

1. Air Vent
2. Top Cover Button
3. Hopper Cover
4. Touch Screen LCD
5. Output Hopper
6. Rear Card Exit Slot
7. On/Off Button
8. Adapter Port
9. Ethernet Port
10. USB Port

Included




SMART-52
Card Printer




Power
adapter



AC Power
cable



USB Cable




Ribbon
Cartridge
(in the Printer)




Quick Guide


I. Printer Installation

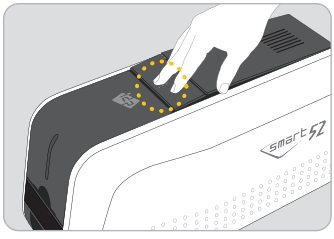

1. Open the Top Cover of the Printer by pressing indicated point.

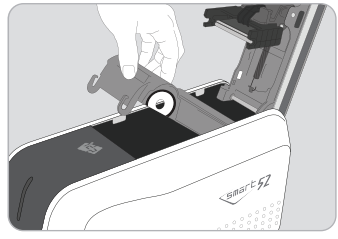


2. Take out the empty Ribbon Cartridge.

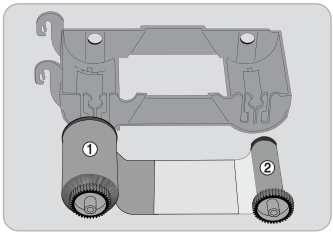


3. Prepare the Ribbon and the Ribbon Cartridge.

※ ① Supply core | ② Take-up core

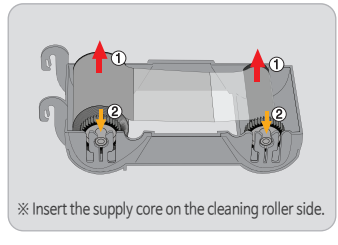


※ Insert the supply core on the cleaning roller side.

4. Insert the cores ① to the hole at first and press the opposite open side ② until it click.

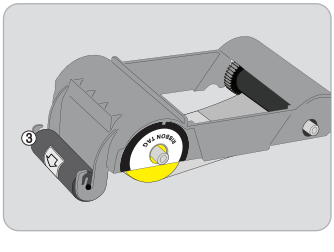


5. Install the disposable cleaning roller in the ribbon cartridge.

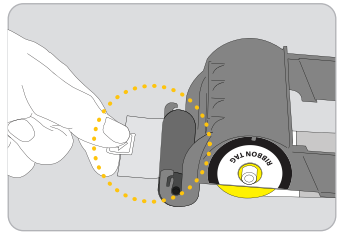


6. Peel the protective film off on the disposable cleaning roller.

The ribbon tag side of the supply core should be mounted in the direction of the ribbon tag marking on the cartridge.

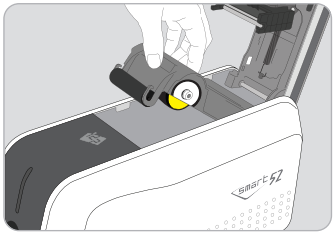


7. Insert the ribbon cartridge.

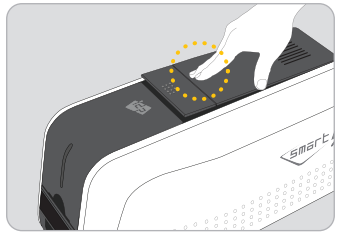

8. Close the top cover of the Printer by pressing the indicated point.



9. Open the hopper cover and load blank cards.

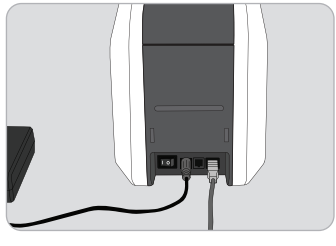

10. Connect the power adapter and USB cable or Ethernet cable.


Do not turn on the printer.
Connect only the USB cable to the PC.

It will be prompted during the following instructions on when to turn on the printer.


※ Use only the power adapter provided with the printer.

Scan the QR code to download the Printer Driver.


II. Printer Driver Installation

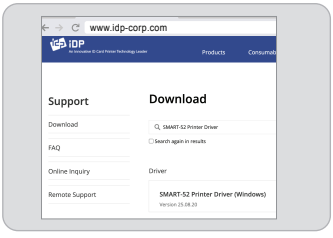

1. Scan the QR Code or Go to **www.idp-corp.com** and search for "Driver" in the Support - Download menu. Download the "SMART-52 Printer Driver". Extract the driver and all its components (Extract All) from the ZIP file and save it on your PC. Do not install the driver from the ZIP program.

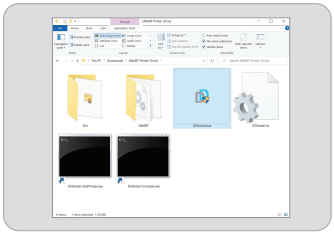


2. Navigate to the extracted zipped files and double click on the "DDinstall.exe" file to begin the installation.

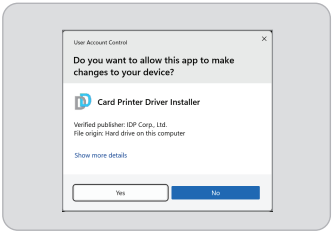


3. If "User Account Control" window is opened, click "Yes".

※ Depending upon your computer's settings, you may be prompted to supply local admin credentials to authorize the installation of the driver.

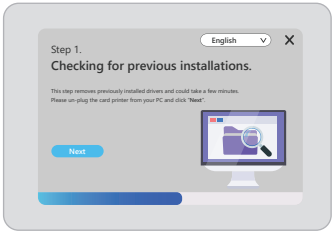


4. To change the language from the default English to something else click "Next".


This step may take a few moments to process.

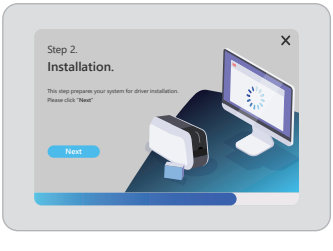

5. Click "Next" to install the printer driver package in STEP 2.

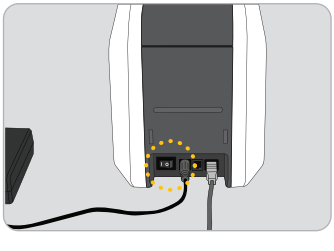

6. Connect the USB cable to PC and turn on the printer by pressing the On/Off button at the indicated point.

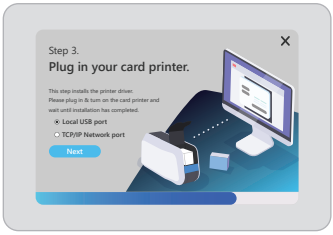


7. In case of USB connection, click “Next” and move to Step 9.
If you are planning on setting up the SMART-52 as a network device, please proceed to Step 8.




※ The Default IP Configuration is DHCP.

8. Search SMART-52 Card Printer connected on the network. Click “OK” after selecting and click “Next”. If the printer is not found, Please configure network setting by referring to “User Manual”.

※ If the printer is on a different network from the PC, please enter the IP address manually.

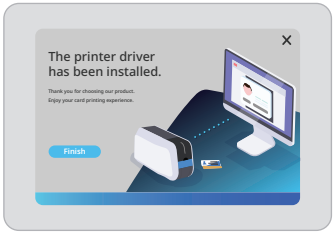


9. Click “Close” after installation has completed.

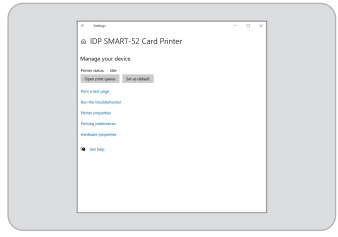


10. Open “Printers and scanners” from “Bluetooth & devices” (or “Devices”) on the Windows “Settings” Click “SMART-52 Card Printer” and select “Manage”. Click “Printer properties”

※ For Windows 7/ 8, access Windows Control Panel and select Device and Printers. Right click “SMART-52 Card Printer” and select “Print Properties”.

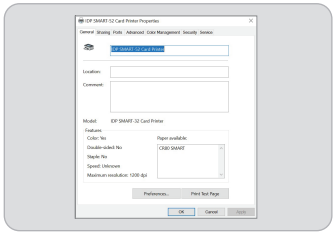


11. Select the “General” tab and click “Print Test Page” to print Test Card.

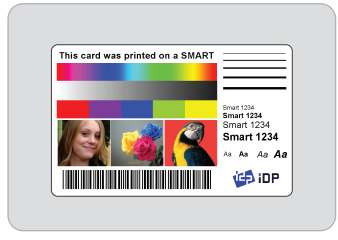


12. Compare the printed Test Card with the image above.


III. Laminator Film Installation Process

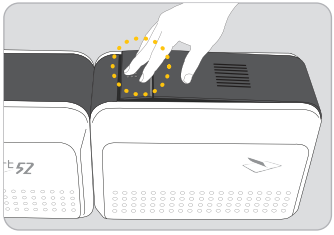


1. Open the top cover of Laminator by pressing indicated point.

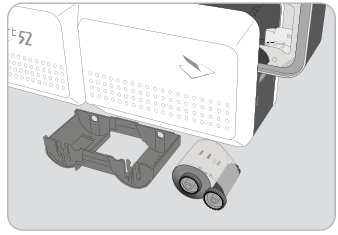


2. Take out the empty film cartridge and prepare the laminator film.

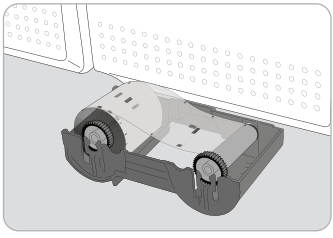

3. Install supply core and take-up core to the holes and press the opposite sides until they click.

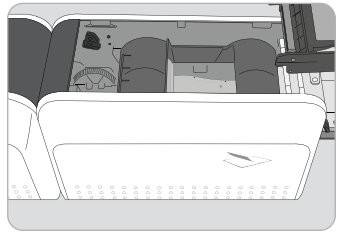


4. Install the film cartridge.

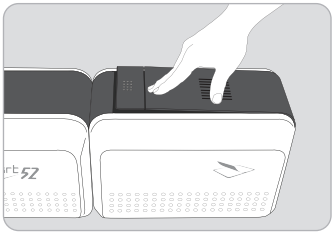

5. Close the top cover of Laminator by pressing indicated point.

Experience the Next Evolution in Card Printing

smart 52

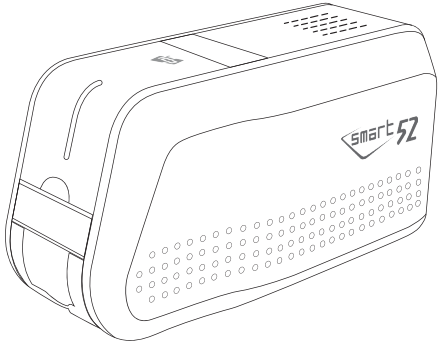


GUÍA DE INSTALACIÓN RÁPIDA

IDP


615522

Características

Frente

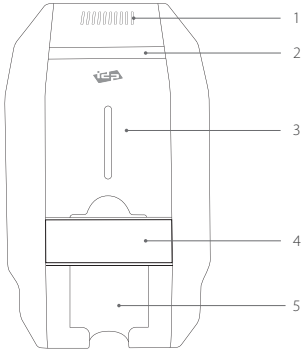

Atras

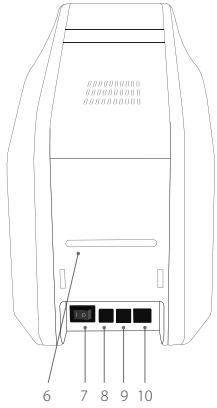

1. Respiradero
2. Botón de cubierta superior
3. Cubierta de tolva
4. Cubierta de tolva
5. Tolva de salida
6. Ranura de salida de tarjeta trasera
7. Botón de encendido/apagado
8. Puerto del adaptador
9. Puerto Ethernet
10. Puerto USB

Incluida




SMART−52
Impresora de tarjetas




Adaptador
de corriente



Cable de alimentación
de CA



Cable USB




Cartucho de cinta
(en la impresora)




Guía rápida


I. Instalación de la impresora

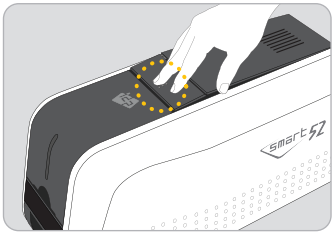

1. Abra la tapa superior de la impresora presionando el punto indicado.

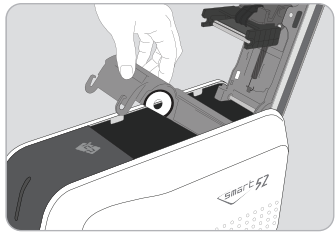


2. Retire el cartucho de cinta vacío.

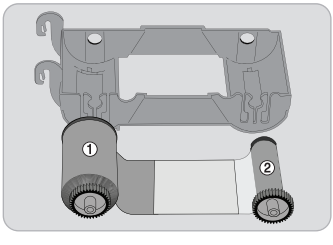


3. Prepare la cinta y el cartucho de cinta.

※ ① Núcleo de suministro | ② Núcleo de recogida

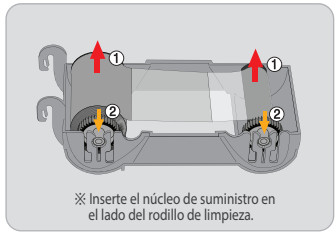


※ Inserte el núcleo de suministro en el lado del rodillo de limpieza.

4. Insertar los núcleos ① Primero, introduce la mano en el agujero y presiona el lado abierto opuesto. ② hasta que haga clic.

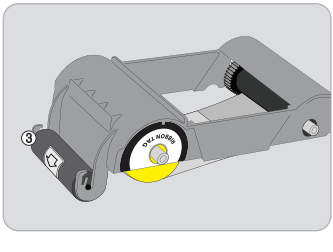


5. ③ Instale el rodillo de limpieza desechable en el cartucho de cinta.

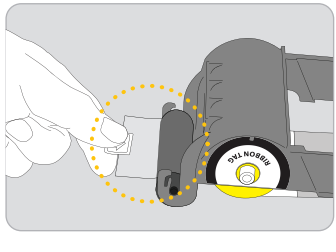


6. Retire la película protectora del rodillo de limpieza desechable.

El lado de la etiqueta de cinta del núcleo de alimentación debe montarse en la dirección de la marca de la etiqueta de cinta en el cartucho.

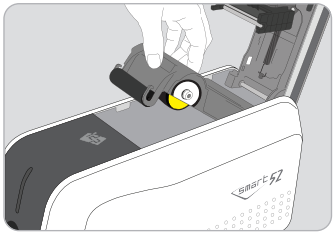


7. Inserte el cartucho de cinta.

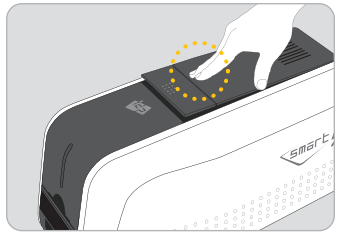

8. Cierre la tapa superior de la impresora



9. Abra la tapa de la tolva y cargue tarjetas en blanco.

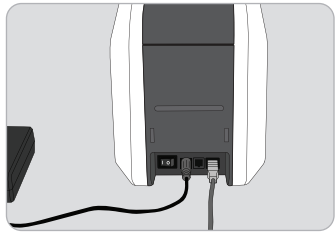


10. Conecte el adaptador de corriente y el cable USB.

No encienda la impresora.
Conecte únicamente el cable USB al ordenador.


※ Utilice únicamente el adaptador de corriente suministrado con la impresora.

Escanee el código QR para descargar el controlador de la impresora.


II. Instalación del controlador de impresora

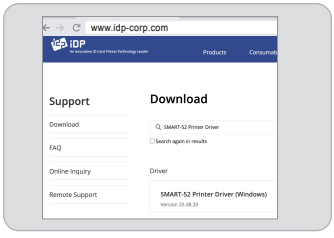

1. Escanee el código QR o visite www.idp-corp.com y busque "Controlador" en el menú Soporte, dentro de la sección Descargas. Descargue el controlador de la impresora SMART-52. Extraiga el controlador y todos sus componentes (Extraer todo) del archivo ZIP y guárdelo en su PC. No instale el controlador desde el archivo ZIP.

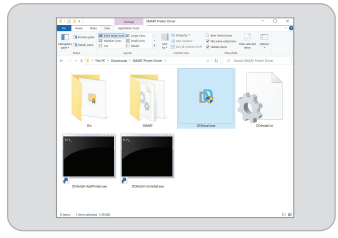


2. Navegue hasta los archivos comprimidos extraídos y haga doble clic en el archivo "DDinstall.exe" para comenzar la instalación.

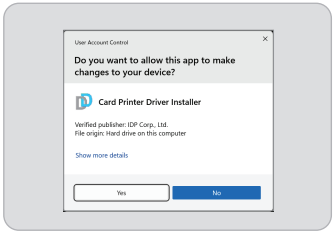


3. Si se abre la ventana "Control de cuentas de usuario", haga clic en "Sí".

※ Dependiendo de la configuración de su ordenador, es posible que se le solicite que proporcione credenciales de administrador localpara autorizar la instalación del controlador.

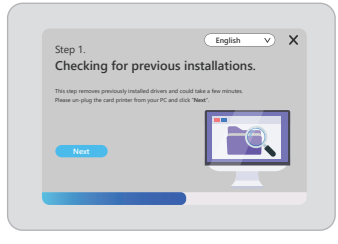


4. Para cambiar el idioma predeterminado de inglés a otro idioma, haga clic en "Siguiente".".


Este paso puede tardar unos instantes en procesarse.

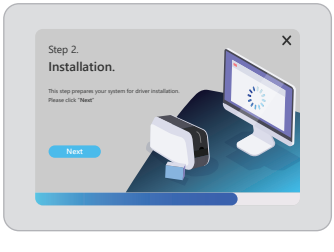


5. Haga clic en "Siguiente" para instalar el paquete de controladores de la impresora en el PASO 2.

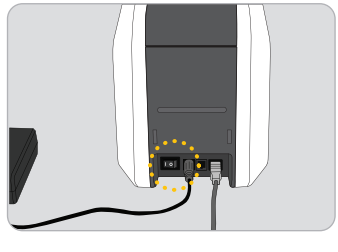

6. Conecte el cable USB al PC y encienda la impresora pulsando el botón On/Off en el punto indicado.

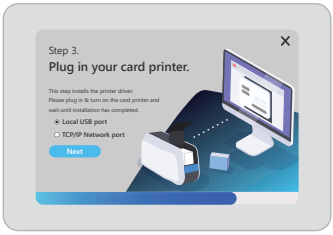


7. En caso de conexión USB, haga clic en “Siguiente” y pase al paso 9.
Si planea configurar el SMART-52 como un dispositivo de red, proceda al paso 8.

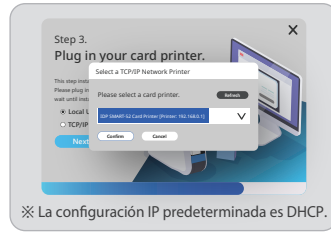


※ La configuración IP predeterminada es DHCP.

8. Localice la impresora de tarjetas SMART-52 conectada a la red. Selecciónela y haga clic en "Aceptar" y, a continuación, en "Siguiente".
Si no encuentra la impresora, configure la red consultando el "Manual del usuario".

※ Si la impresora está en una red diferente a la de la PC, por favor introduzca la dirección IP manualmente.

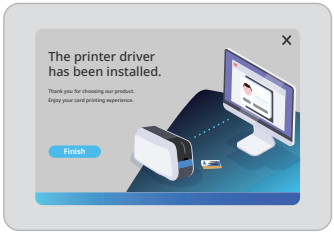


9. Haga clic en “Cerrar” una vez finalizada la instalación.

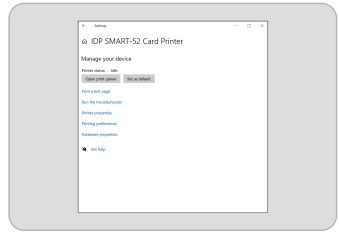


10. Abra «Impresoras y escáneres» desde «Bluetooth y dispositivos» (o «Dispositivos») en la configuración de Windows. Haga clic en «IMPRESORA DE CARTÓN SMART-52» y seleccione «Administrar». Haga clic en «Propiedades de la impresora».

※ Para Windows 7/8, acceda al Panel de control de Windows y seleccione Dispositivos e impresoras.
Haz clic con el botón derecho en “Impresora de tarjetas SMART-52” y selecciona “Propiedades de impresión”.

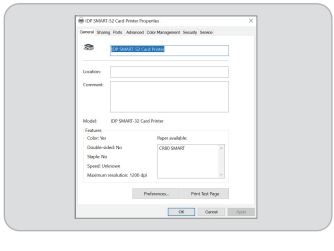


11. Seleccione la pestaña “General” y haga clic en“Imprimir página de prueba” para imprimir la tarjeta de prueba.

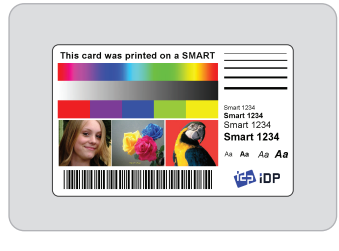


12. Compare la tarjeta de prueba impresa con la imagen de arriba.


III. Proceso de instalación de la película laminadora

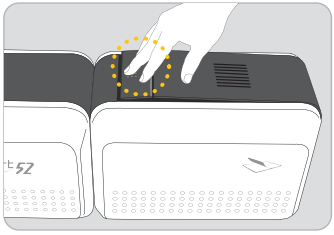


1. Abra la tapa superior de la laminadora presionando el punto indicado.

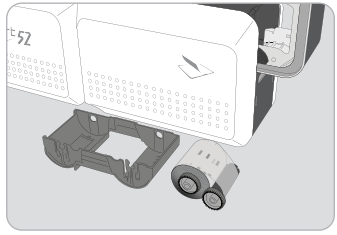


2. Retire el cartucho de película vacío y prepare la película para laminar.

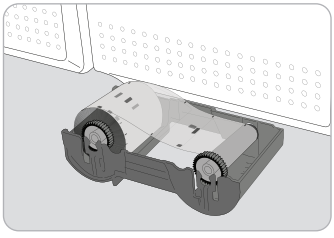

3. Instale el núcleo de suministro y el núcleo de recogida en los orificios y presione los lados opuestos hasta que hagan clic.

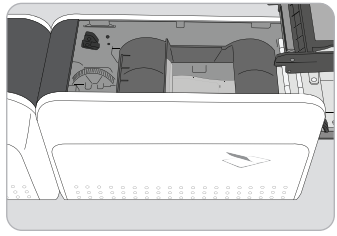

4. Instale el cartucho de película.

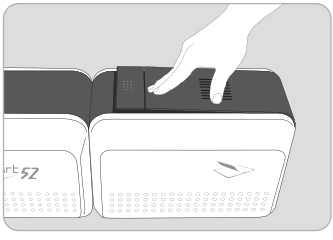

5. Cierre la tapa superior de la laminadora presionando el punto indicado.

IDP WARRANTY CERTIFICATE

Review your new printer!

IDP Americas, Inc hereby warrants IDP Americas, Inc Products sold by IDP Americas, Inc or by authorized dealers in accordance with the following terms and conditions.

SCOPE OF WARRANTY

IDP's warranty period is three (3) years from the dare of initial invoice on the 31/310, 32/320, 51/510, 52/520, 70, 81/810 series printers, options, and print heads (to 20,000 prints of lifetime on 81/810). One (1) year warranty on the SMART-BIT, 21/210, and consumables. All IDP Americas, Inc products purchased directly from IDP Americas, Inc or an IDP Americas, Inc authorized dealer, are defective in material and/or workmanship.

EXCLUSIONS

This warrnaty does not apply with respect to the following:

1. Defects or damage caused by accident, fire, flood, lightning or other acts of nature.
2. Defects or damage caused by abuse, misuse, negligence or failure to observe the instructions contained in the User manual furnished at the time of original purchase.
3. Damage caused during shipment or handling.
4. Products that have had their serial numbers altered or removed.
5. Products that have been altered or repaired by anyone other than IDP Americas, Inc or an authorized service center in a manner that has affected their performance, stability or reliability.

TARJETA DE GARANTIA DE IDP

¡Revise su nueva impresora!

Gracias por comprar nuestro producto. Con esta tarjeta, IDP Corporation le garantiza el producto de IDP Corporation vendido por IDP Corporation o el comerciante autorizado por IDP Corporation de acuerdo con los siguientes términos y condiciones.

ALCANCE DE GARANTÍA

El período de garantía de IDP es de tres (3) años a partir de la fecha de la factura inicial en las impresoras, opciones y cabezales de impresión de las series 31/310, 32/320, 51/510, 52/520, 70, 81/810 (hasta 20 000 impresiones o de por vida en la 81/810). Garantía de un (1) año para SMART-Bit, 21/210 y consumibles. Todos los productos de IDP Americas, Inc comprados directamente de IDP Americas, Inc o de un distribuidor autorizado de IDP Americas, Inc tienen defectos de material y/o mano de obra.

PRECLUSIONES

Este Garantía no será válida bajo las siguientes condiciones:

1. Defectos o daño causado por accidente, incendio, inundación, rayos u otras causas naturales.
2. Defectos o daño causado por abuso, maltrato, descuido, o cuando el uso y mantenimiento no ha sido de acuerdo con las instrucciones contenidas en el instructivo de operación del CD provisto al tiempo de venta.
3. Daño causado durante transporte o manejo.
4. Si los números de serie del producto han sido alterados o eliminados.
5. Productos que hayan sido alterados o reparados por cualquiera que no sea IDP Corporation o un centro de servicio autorizado por IDP Corporation en una forma que ha afectado el rendimiento, estabilidad o confiabilidad del producto.

Experience the Next Evolution in Card Printing



IDP Corp., Ltd.
#601, 50, Digital-ro 33-gil,
Guro-gu, Seoul, Korea,
08377

T +82-2-6099-3700
F +82-2-6099-3717
E sales@idp-corp.com

IDP Americas, Inc.
1485 S County Trail, Unit 306
East Greenwich, RI 02818
USA

T +1-401-400-7111
F +1-401-667-7445
E sales@idpamericas.com

IDP Middle East
LOB18 Office#1203, JAFZA
VIEW 18, Jebel Ali extension,
Dubai U.A.E.

T +971-4-546-8111
E mea@idp-corp.com

© 2026 IDP Corp., Ltd. All rights reserved.